


33 11 091 - Renewing driving flange


Remove driving flange 33 11 060.
Install old dust seal (1) in new driving flange.
Fit spacer tube (2) on new driving flange.
Determine "B".

-> 33 11 060

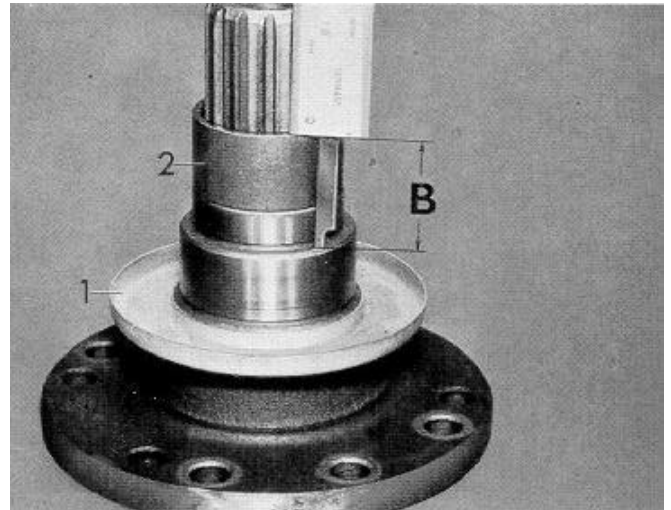

Check distance A between the differential housing and rear axle shaft pinion and determine installation clearance C.
B must always be 0.10-0.15 mm (0.0039-0.0059 in.) larger than A.
Example: A 33.70 mm (1.326 in.)
: B 33.60 mm (1.322 in.)

Clearance C 0.10 mm (0.004 in.)

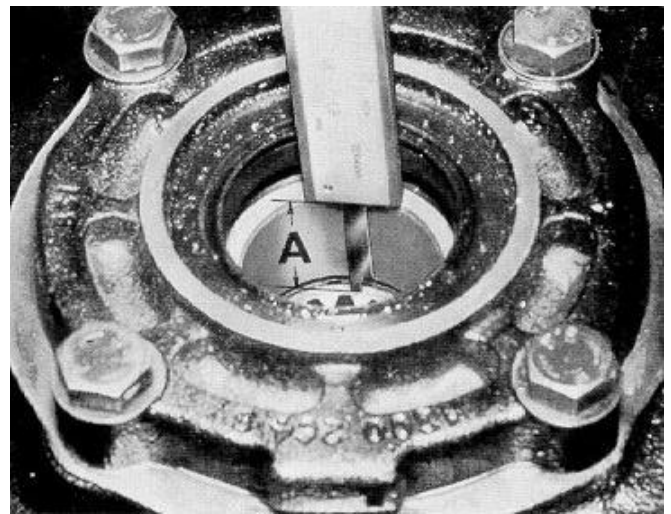

Layout driving flange and shaft seal.
Ensure stipulated installation clearance exists (C).

