



## 33 13 510 - Removing and fitting differential housing

Removing and installing final drive 33 10 010.  
Drain off oil.  
Attach final drive to bracket 6003-3.  
Remove cover plate.


-> 33 10 010

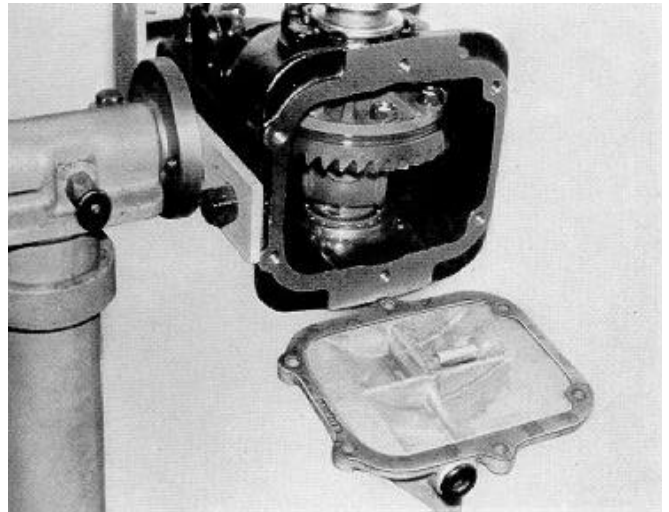


Use retainer wrench 604 and spacer plate 6040 to dismantle the driving flange.

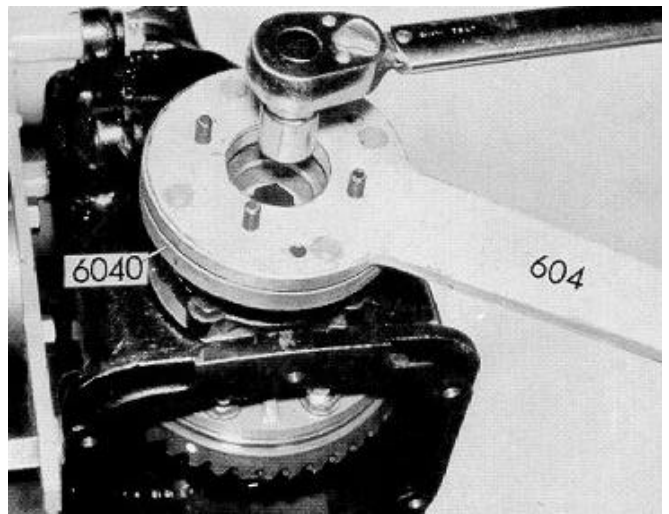


Draw out driving flange using Kukko extractor 20710 and support bracket 7011-1.

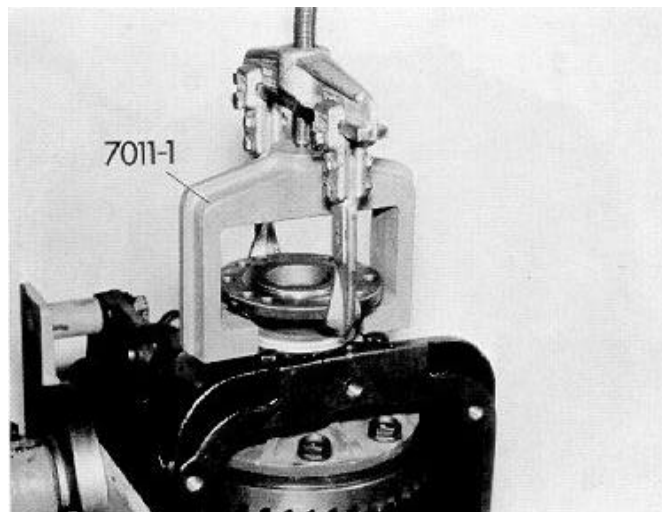

**Installation instructions:** Do not confuse the spacer tubes.

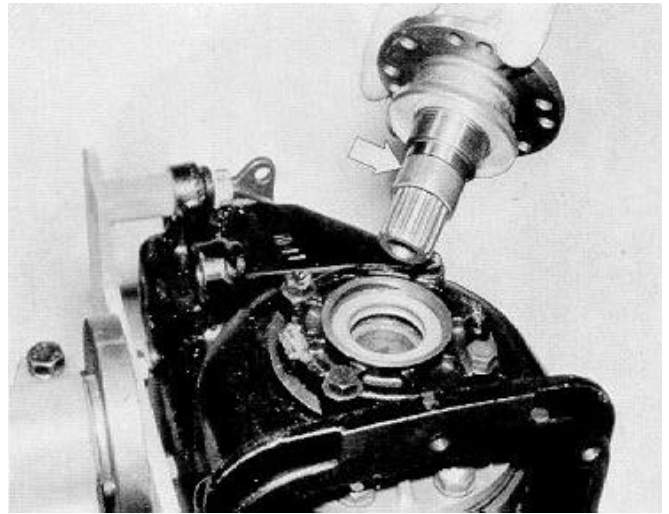

Remove cover plate.  
**Warning:** Mark cover plate. Differential housing seating and backlash is adjusted using shim.  
Check O-rings and if necessary renew.

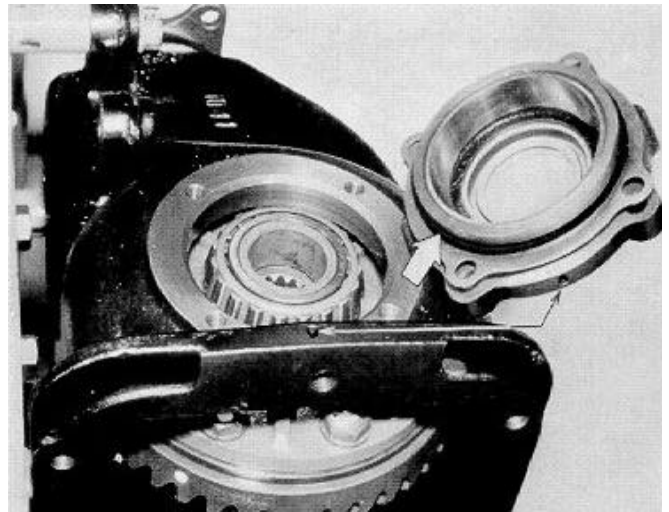

Position the open side of the differential housing parallel to the housing gasket surfaces. Move the bearing as far as possible through the bearing cover aperture and tilt differential housing upwards and remove.

